

## PCAP Touch Screen Monitor Open-Frame Bracket Assembly Guide



Open-Frame Bracket




Bracket Connector Piece



8 x 3mm Screws


### Assembly Instructions

1. Screw the Open-Frame Bracket to the Bracket Connector Piece using the provided 3mm Screws.

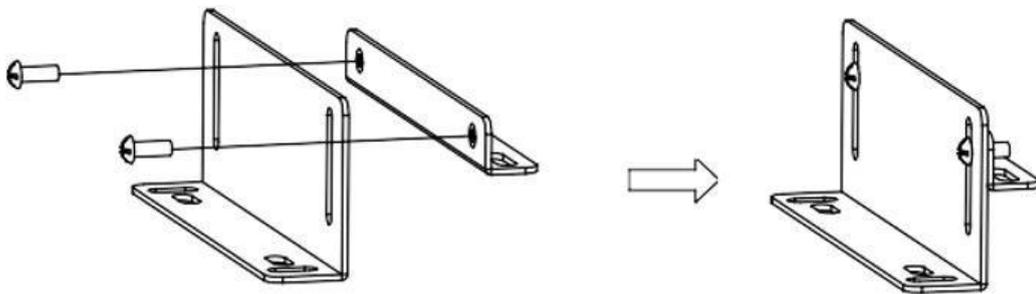


**Note:** You can adjust the bracket anywhere along the axis of the hole connecting the pieces allowing a flush fit with the wall or enclosure the unit is installed on.


2. Unscrew the 8 screws on the edges of unit (see bottom image based on unit size) then re-screw the fully assembled open-frame bracket to the unit using the same screws.

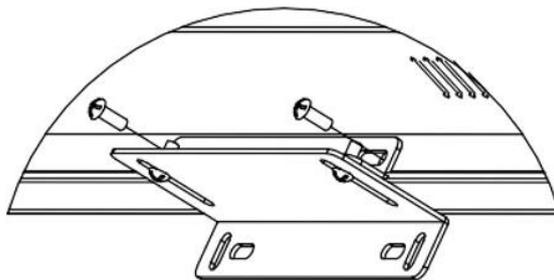

### Open-frame bracket installation locations with different sized products:

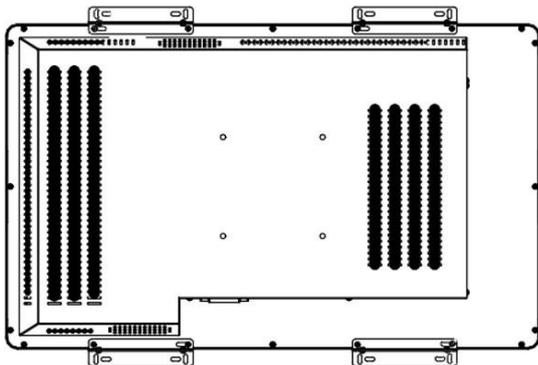

WP22A

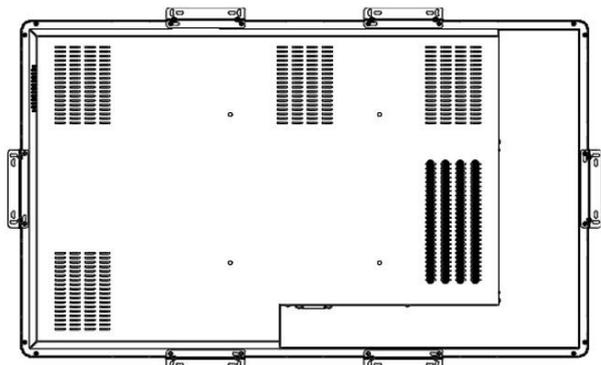

WP32A, WP43A, WP50A and WP55A